

## SETUP GUIDE

### iMatrix Micro Gateway



 
#### Step 1

Download iMatrix app.



#### Step 2

Open the app and log into your iMatrix account or create a new one. Use Login / Register buttons in a sidebar.



#### Step 3

Click on the + icon in the top-right corner of the screen.



#### Step 3

Scan QR code on the back side of your gateway.



#### Step 4

Plug your gateway into a power supply and follow instructions on the screen of your phone.



#### Step 5

Customize your Micro Gateway, give it a unique name and take a photo.



#### Step 6

Micro Gateway will automatically connect to your iMatrix sensors and send data to the Cloud.



## NOTIFICATION MANAGEMENT

#### Step 7

To receive notifications and alerts select Dashboard – Settings – Notifications and Reports.

In "Channels" box add your e-mail, phone number and number for SMS messages to receive Alerts from your sensor.

**Channels**

Send emails to:

Send SMS to:

Call:

Send WhatsApp messages to:

Message and Data Rates May Apply

#### Step 8

You can select to which channels you want to receive notifications about different types of events.

**Note: To receive Alerts in real-time, you need to be within Bluetooth range with the App running or use an iMatrix Wi-Fi Micro Gateway.**

**Notifications**

About things:

Device Alerts	Device Warnings	Device Advisory Status	Device returns to Normal State	Device goes to asleep/Offline
<input type="radio"/> Email	<input type="radio"/> Email	<input type="radio"/> Email	<input type="radio"/> Email	<input type="radio"/> Email
<input type="radio"/> WhatsApp	<input type="radio"/> WhatsApp	<input type="radio"/> WhatsApp	<input type="radio"/> WhatsApp	<input type="radio"/> WhatsApp
<input type="radio"/> SMS	<input type="radio"/> SMS	<input type="radio"/> SMS	<input type="radio"/> SMS	<input type="radio"/> SMS

#### Step 9

Select the sensor for which you want to set up an alert notification and click the cogwheel icon in top right corner.

In the Basic view you can set your **Alarm High** and **Alarm Low** limits, and **Threshold in time** for each parameter separately. If you need more alert levels (up to 6) you can use Advanced view.

**Notification Management**

Temperature

Alarm High Limit:  °F

Normal operation

Alarm Low Limit:  °F

Threshold Qualification (mm:ss):

#### Notification Management

Temperature

Alarm High Limit:  °F

Warning High Limit:  °F

Advisory High Limit:  °F

Normal operation

Advisory Low Limit:  °F

Warning Low Limit:  °F

Alarm Low Limit:  °F

Threshold Qualification (mm:ss):

## LED INDICATORS

### Power Up

The LED blinks green during startup and the self-diagnostics sequence.



### Scanning Mode

The LED breathes yellow while the device scans for available Wi-Fi Access Points within range.



### Setup Mode

The LED blinks green/yellow. Use the iMatrix app to set up the Micro Gateway.



### Connecting Mode

The LED blinks yellow while connecting to a Wi-Fi Access Point.



### Not Connected

The LED blinks red if the Micro Gateway fails to connect to the Wi-Fi Access Point and returns to Setup Mode.



### Connected

**Normal Operation.** The LED breathes green when connected to the Wi-Fi Access Point. It goes solid yellow during data transmission to the iMatrix Cloud.



### OTA Update

The LED breathes green when connected to the iMatrix System. When performing an Over-The-Air (OTA) update it blinks yellow during the processing of data packets.



### Reset Required

The LED remains solid green. Press the LED/Button once to reset the Micro Gateway.



## PRO TIPS

#### Ensure Proper Placement:

- Place the Micro Gateway within range of the Wi-Fi Access Point as well as the iMatrix BLE sensors. Optimal placement ensures reliable communication.
- Consider using multiple Micro Gateways to add redundancy to the network and expand area coverage.

#### Monitor Sensor Status:

- Log into your iMatrixsys.com cloud account to confirm which iMatrix sensors are being monitored.
- Check the number of sensors in each group and the total number of devices connected.



#### Re-enter Setup Mode:

- To change the SSID or password, **press the LED/Button on the Micro Gateway four times within four seconds.** This action will put the Micro Gateway back into Setup Mode.

## MANUAL WI-FI CONFIGURATION

If you're having trouble connecting the Micro Gateway using the app, you can do it via gateway web interface:

- Position your Wi-Fi-enabled device (PC or smartphone) near the Micro Gateway.
- Put the Micro Gateway in Setup Mode (**press the LED/Button on the side four times within four seconds**).
- Wait until you see public Wi-Fi network iMatrix.uGW->your gateway's serial number->
- Connect your device to the Micro Gateway. If your device alerts you that this network has no internet access, select "Don't disconnect".
- Open a browser and enter <http://192.168.7.1>
- From the list of visible networks select the SSID of your network, enter password and click "Connect" to finish manual configuration.

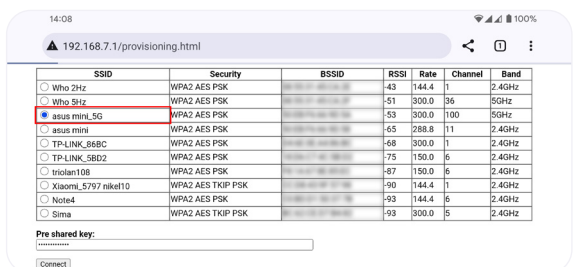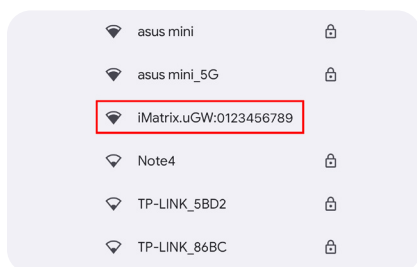

If you have problems with your iMatrix device setup, contact support: [support@iMatrixsys.com](mailto:support@iMatrixsys.com)